



## SWR-304D/SWR-304E/ SWR-254D/SWR-254E

12 Inch Subwoofer (SWR-304D/SWR-304E)  
10 Inch Subwoofer (SWR-254D/SWR-254E)

**APPLICATION GUIDE**  
Please read this manual to maximize your enjoyment of the outstanding performance and feature capabilities of the equipment, then retain the manual for future reference.

**GUIDE D'APPLICATION**  
Veuillez lire ce mode d'emploi pour tirer pleinement profit des excellentes performances et fonctions de cet appareil, et conservez-le pour toute référence future.



ALPINE ELECTRONICS, INC.  
Tokyo Office : 1-1-8 Nishi Gotanda,  
Shinagawa-ku, Tokyo 141-8501, Japan  
Tel. : (03) 3494-1101

ALPINE ELECTRONICS OF AMERICA, INC.  
19145 Gramercy Place, Torrance,  
California 90501 U.S.A.  
Tel. : 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.  
Suite 203, 7300 Warden Ave, Markham,  
Ontario L3R 9Z6, Canada  
Tel. : 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.  
6-8 Fiveways Boulevard Keysborough,  
Victoria 3173, Australia  
Tel. : (03) 9769-0000

ALPINE ELECTRONICS GmbH  
Brandenburger Strasse 2-6 D-40880 Ratingen,  
Germany  
Tel. : 02102-45 50

ALPINE ITALIA S.p.A.  
Via C. Colombo 8, 20090 Trezzano Sul  
Naviglio MI, Italy  
Tel. : 02-48 40 16 24

ALPINE ELECTRONICS FRANCE S.A.R.L.  
(RCS PONTOISE B 338 101 280)  
98, Rue De La Belle Etoile, Z.I. Paris Nord II  
B.P. 50016 F-95945, Roissy,  
Charles de Gaulle Cedex, France  
Tel. : 01-48 63 89 89

ALPINE ELECTRONICS OF U.K., LTD.  
13 Tanner Drive, Blakelands,  
Milton Keynes MK 14 5BU, U.K.  
Tel. : 01908-61 15 56

ALPINE ELECTRONICS DE ESPAÑA, S.A.  
Portal De Gamarrá 36, Pabellón 32  
01013 Vitoria (Alava) - Apdo. 133, Spain  
Tel. : 34-45-283588

Designed by ALPINE Japan  
Printed in Japan (T)  
68P11199Y34-O

## Points to Observe for Safe Usage/Points à respecter pour une utilisation sûre

- Read this manual carefully before starting operation and use this system safely. We cannot be responsible for problems resulting from failure to observe the instructions in this manual.
- This manual uses various pictorial displays to show how to use this product safely and to avoid harm to yourself and others and damage to your property. Here is what these pictorial displays mean. Understanding them is important for reading this manual.
- Meaning of displays**

<b>Warning</b>	This label is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions will result in severe injury or death.
<b>Caution</b>	This label is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions can result in injury or material damage.
<b>Tips</b>	This indicates supplementary explanation of operation of this system.

- Lire attentivement ce manuel avant de commencer l'opération et l'utilisation du système en toute sécurité. Nous dégagons toute responsabilité des problèmes résultant du non-respect des instructions décrites dans ce manuel.
- Ce manuel utilise divers affichages illustrés pour montrer comment utiliser cet appareil en toute sécurité, pour éviter de s'exposer soi-même et les autres personnes aux dangers et pour éviter d'endommager l'appareil. Voici la signification de ces affichages illustrés. Il est important de bien les comprendre pour la lecture de ce manuel.
- Signification des affichages**

<b>Avertissement</b>	Cette étiquette a pour but de prévenir l'utilisateur de la présence d'instructions importantes. Si ces instructions ne sont pas suivies, des blessures graves ou mortelles risquent d'être occasionnées.
<b>Attention</b>	Cette étiquette a pour but de prévenir l'utilisateur de la présence d'instructions importantes. Si ces instructions ne sont pas suivies, des blessures ou des dommages matériels risquent d'être occasionnées.
<b>Conseils</b>	Ce symbole signale la présence d'instructions complémentaires facilitant l'exploitation du système.

### Caution

#### HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this unit to have the work done.

#### USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place as parts that come loose can create hazards.

#### DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may cause smoke or fire.

#### NE PAS INSTALLER DANS DES ENDROITS TRES HUMIDES OU POUSSIÉREUX

Eviter d'installer l'appareil dans des endroits très humides ou poussiéreux. L'humidité ou la poussière qui pénètre dans cet appareil risque de dégager de la fumée ou de provoquer un incendie.

#### MAKE THE CORRECT CONNECTIONS

Failure to make the correct connections can cause fire or accident to occur.

#### ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED

Route the cables and wiring so as not to be crimped by moving parts like seat rail or make contact with sharp or pointed spots which might damage the wiring.

#### DO NOT RAISE THE VOLUME EXCESSIVELY

Keep the volume at a level where you can still hear outside noises while driving. Driving while unable to hear outside noises could be the cause of accident.

#### DO NOT USE THIS EQUIPMENT OUTSIDE THE VEHICLE

Do not use the equipment for purposes other than listed for the vehicle. Failure to do so may result in electric shock or injury.

#### N'AUGMENTEZ PAS DE MANIÈRE EXCESSIVE LE VOLUME

Réglez le volume à un niveau qui vous permette d'écouter les bruits extérieurs pendant la conduite. Vous risquez de provoquer un accident si vous conduisez sans entendre les bruits extérieurs.

#### N'UTILISEZ PAS CET APPAREIL HORS DU VÉHICULE

Cet appareil ne doit être utilisé que dans un véhicule et dans le but pour lequel il est conçu. Tout autre utilisation peut provoquer une électrocution ou un incendie.

### Attention

#### CONFIER LE CABLAGE ET L'INSTALLATION A DES PROFESSIONNELS

Le câblage et l'installation de cet appareil nécessitent une compétence et expérience technique confirmée. Afin de garantir la sécurité, toujours contacter le revendeur auprès duquel l'appareil a été acheté pour lui confier les travaux à faire.

#### UTILISER LES ACCESSOIRES SPECIFIÉS ET LES INSTALLER CORRECTEMENT

S'assurer d'utiliser uniquement les accessoires spécifiés.

L'utilisation d'autres pièces non désignées risque de provoquer des dommages à l'intérieur de l'appareil ou son installation risque de ne pas être faite correctement, car les pièces desserrées peuvent provoquer des dangers.

#### DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may cause smoke or fire.

#### NE PAS INSTALLER DANS DES ENDROITS TRES HUMIDES OU POUSSIÉREUX

Eviter d'installer l'appareil dans des endroits très humides ou poussiéreux. L'humidité ou la poussière qui pénètre dans cet appareil risque de dégager de la fumée ou de provoquer un incendie.

#### MAKE THE CORRECT CONNECTIONS

Failure to make the correct connections can cause fire or accident to occur.

#### ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED

Route the cables and wiring so as not to be crimped by moving parts like seat rail or make contact with sharp or pointed spots which might damage the wiring.

#### DO NOT RAISE THE VOLUME EXCESSIVELY

Keep the volume at a level where you can still hear outside noises while driving. Driving while unable to hear outside noises could be the cause of accident.

#### DO NOT USE THIS EQUIPMENT OUTSIDE THE VEHICLE

Do not use the equipment for purposes other than listed for the vehicle. Failure to do so may result in electric shock or injury.

#### N'UTILISEZ PAS CET APPAREIL HORS DU VÉHICULE

Cet appareil ne doit être utilisé que dans un véhicule et dans le but pour lequel il est conçu. Tout autre utilisation peut provoquer une électrocution ou un incendie.

## SPECIFICATIONS

### SWR-304D/SWR-304E

- System.....12" Subwoofer
- Power Handling.....1,000 watts Peak
- Power Handling.....300 watts RMS.
- Amplification (per speaker).....Up to 300W RMS.
- Frequency Response.....30Hz-1.5kHz
- Sensitivity.....90dB/W(1m)
- Impedance.....4 ohms
- D.C. Coil Resistance (Re).....4.0 ohms
- Inductance (Le) 1kHz/10kHz.....2.8mH/1.0mH
- Free Air Resonance (Fs).....30Hz
- Equivalent Stiffness (Vas).....69 /
- Sealed Box for Q=0.707.....0.85ft.<sup>3</sup>(24 J)
- Mechanical Q (Qms).....6.64
- Electrical Q (Qes).....0.35
- Total Q (Qts).....0.33
- Excursion (X max, X peak).....4.0mm, 16.0mm
- Cone Area (Sd).....511cm<sup>2</sup>
- Diaphragm Material.....Plastic Coated Pulp
- Magnet Weight, Material.....1.5kg(52oz)
- Voice Coil Diameter.....75mm(3")
- Driver's Physical Volume (Front Mt.).....3.2 /
- Weight Per Speaker.....5.9kg (13 lbs.)

## CARACTÉRISTIQUES

### SWR-304D/SWR-304E

- Système.....12" Subwoofer
- Puissance maximale.....1.000 watts
- Puissance nominale.....300 watts
- Amplification (per haut-parleur).....Plus de 300 watts RMS.
- Bande passante.....30Hz-1,5kHz
- Sensibilité.....90dB/W(1m)
- Impédance.....4 ohms
- Résistance de la bobine de C.C. (Re).....4.0 ohms
- Induction (Le) 1kHz/10kHz.....2,8mH/1,0mH
- Resonance à l'air libre (Fs).....30Hz
- Rigidité équivalente (Vas).....69 /
- Boîte hermétique pour Q=0.707.....0.85ft.<sup>3</sup>(24 J)
- Q mécanique (Qms).....6.64
- Q électrique (Qes).....0.35
- Q total (Qts).....0.33
- Excursion (X max, X peak).....4,0mm, 16,0mm
- Surface de la cône (Sd).....511cm<sup>2</sup>
- Matériau du diaphragme.....Pulpe plastifiée
- Poids magnétique, matériel.....1,5kg(52oz)
- Ferrite de strontium
- Diamètre de la bobine mobile.....75mm(3")
- Volume physique du conducteur (Mt. frontal).....3,2 /
- Poids (par haut-parleur).....5,9kg (13 livre)

## SPECIFICATIONS

### SWR-254D/SWR-254E

- System.....10" Subwoofer
- Power Handling.....1,000 watts Peak
- Power Handling.....300 watts RMS.
- Amplification (per speaker).....Up to 300W RMS.
- Frequency Response.....34Hz-2kHz
- Sensitivity.....89dB/W(1m)
- Impedance.....4 ohms
- D.C. Coil Resistance (Re).....4.0 ohms
- Inductance (Le) 1kHz/10kHz.....2.7mH/1.0mH
- Free Air Resonance (Fs).....34Hz
- Equivalent Stiffness (Vas).....37 /
- Sealed Box for Q=0.707.....0.46ft.<sup>3</sup>(13 J)
- Mechanical Q (Qms).....6.10
- Electrical Q (Qes).....0.34
- Total Q (Qts).....0.32
- Excursion (X max, X peak).....4.0mm, 16.0mm
- Cone Area (Sd).....356cm<sup>2</sup>
- Diaphragm Material.....Plastic Coated Pulp
- Magnet Weight, Material.....1.5kg(52oz)
- Voice Coil Diameter.....75mm(3")
- Driver's Physical Volume (Front Mt.).....2.7 /
- Weight Per Speaker.....5.6kg (12 lbs. 5 oz.)

## CARACTÉRISTIQUES

### SWR-254D/SWR-254E

- Système.....10" Subwoofer
- Puissance maximale.....1.000 watts
- Puissance nominale.....300 watts
- Amplification (per haut-parleur).....Plus de 300 watts RMS.
- Bande passante.....34Hz-2kHz
- Sensibilité.....89dB/W(1m)
- Impédance.....4 ohms
- Résistance de la bobine de C.C. (Re).....4.0 ohms
- Induction (Le) 1kHz/10kHz.....2,7mH/1,0mH
- Resonance à l'air libre (Fs).....34Hz
- Rigidité équivalente (Vas).....37 /
- Boîte hermétique pour Q=0.707.....0.46ft.<sup>3</sup>(13 J)
- Q mécanique (Qms).....6,10
- Q électrique (Qes).....0,34
- Q total (Qts).....0,32
- Excursion (X max, X peak).....4,0mm, 16,0mm
- Surface de la cône (Sd).....356cm<sup>2</sup>
- Matériau du diaphragme.....Pulpe plastifiée
- Poids magnétique, matériel.....1,5kg(52oz)
- Ferrite de strontium
- Diamètre de la bobine mobile.....75mm(3")
- Volume physique du conducteur (Mt. frontal).....2,7 /
- Poids (par haut-parleur).....5,6kg (12 livre, 5 onces)

## SPECIFICATIONS

### ALPINE ELECTRONICS OF AMERICA, INC.

- System.....10" Subwoofer
- Power Handling.....1,000 watts Peak
- Power Handling.....300 watts RMS.
- Amplification (per speaker).....Up to 300W RMS.
- Frequency Response.....34Hz-2kHz
- Sensitivity.....89dB/W(1m)
- Impedance.....4 ohms
- D.C. Coil Resistance (Re).....4.0 ohms
- Inductance (Le) 1kHz/10kHz.....2.7mH/1.0mH
- Free Air Resonance (Fs).....34Hz
- Equivalent Stiffness (Vas).....37 /
- Sealed Box for Q=0.707.....0.46ft.<sup>3</sup>(13 J)
- Mechanical Q (Qms).....6.10
- Electrical Q (Qes).....0.34
- Total Q (Qts).....0.32
- Excursion (X max, X peak).....4.0mm, 16.0mm
- Cone Area (Sd).....356cm<sup>2</sup>
- Diaphragm Material.....Plastic Coated Pulp
- Magnet Weight, Material.....1.5kg(52oz)
- Voice Coil Diameter.....75mm(3")
- Driver's Physical Volume (Front Mt.).....2.7 /
- Weight Per Speaker.....5.6kg (12 lbs. 5 oz.)

## CARACTÉRISTIQUES

### ALPINE ELECTRONICS OF AMERICA, INC.

## INTRODUCTION

**INTRODUCTION:**  
At Alpine, Sonic Excellence is a goal we consider most important. Your purchase of this subwoofer tells us that you feel the same. We take us that you feel the same. We take great pride in the long tradition of excellence in sound quality that the Alpine name represents. Now as a part of that tradition, we welcome you to the great number of discerning audiophiles who own Alpine products. This manual has been prepared to help you maximize your enjoyment of the outstanding performance and features of your new Alpine SWR-304D/SWR-304E, SWR-254D/SWR-254E subwoofer. This low frequency subwoofer incorporates many advanced technical and performance features. To realize the exceptional performance for which this product is capable, it is necessary that all signal sources, power amplifiers, and interconnects are of the highest sonic quality. We recommend Alpine head units, crossovers, amplifiers, satellite speakers, cables, and accessories. Due to the complexity of properly enclosing and installing subwoofers, we strongly recommend you have the SWR-304D/SWR-304E, SWR-254D/SWR-254E installed by your authorized Alpine dealer. Please study this manual carefully to become acquainted with all the special features and capabilities of your new Alpine subwoofer. Should you have any questions, please contact your authorized Alpine dealer.

**DEFINITION OF TERMS:**  
**Resonance:** Most objects vibrate naturally at certain frequencies. If you hang a weight on a spring, then pull it and let go, the weight will bob up and down at a certain frequency determined by the amount of mass and by the stiffness of the spring.  
**(Compliance, or softness, is simply the opposite of stiffness).** Speakers behave in a similar way; spider and surround provide stiffness; moving parts plus air loading provide mass.

## INTRODUCTION

**INTRODUCTION:**  
Chez Alpine, la fidélité du son est le but primordial. Votre acquisition de ce subwoofer nous fait conclure que vous partagez cet avis. Nous nous vantons de la longue tradition d'excellence en qualité sonique qui représente le nom d'Alpine. Comme part de cette tradition nous vous souhaitons la bienvenue parmi le nombre augmentant d'amateurs de musique qui possèdent et opèrent les produits Alpine. Ce manuel a été conçu pour vous aider à maximiser le plaisir que vous aurez de l'éminente performance et des caractéristiques valeursuses de votre nouvel Alpine, le subwoofer SWR-304D/SWR-304E, SWR-254D/SWR-254E. Ce subwoofer de basses fréquences incorpore un grand nombre de techniques et de caractéristiques avancées. Pour atteindre la performance exceptionnelle dont est capable ce produit, il est nécessaire que toutes les sources de signaux, les amplificateurs de puissance et les dispositifs d'interconnexion qui lui sont combinés soient de haute qualité sonique. Nous recommandons autant que possible l'usage d'unités principales, diviseurs, amplificateurs, haut-parleurs satellites, câbles et accessoires de l'Alpine dans cette combinaison. Dû à la complexité du blindage et de l'installation correcte des subwoofers, nous recommandons que le SWR-304D/SWR-304E, SWR-254D/SWR-254E soit installé par votre revendeur agréé d'Alpine. Veuillez étudier soigneusement ce manuel pour vous familiariser avec toutes les caractéristiques spéciales et les capacités de votre nouveau subwoofer Alpine. Pour toute réponse à vos questions, veuillez consulter votre détaillant Alpine.

**DÉFINITION DES TERMES :**  
**Résonance :** La majorité des objets vibrent naturellement à certaines fréquences. Si vous accrochez un poids à un ressort, puis le tirez et lâchez prise, le poids pendra à une certaine fréquence déterminée par le total de la masse et la rigidité du ressort. (**Compliance**, ou élasticité, est simplement le contraire de rigidité). Les haut-parleurs fonctionnent de manière similaire ; le croisillon et l'encadrement fournissent la rigidité; les pièces en mouvement et la charge d'air fournissent la masse.

**F<sub>s</sub>** indique la fréquence de résonance du haut-parleur ; **F<sub>c</sub>** indique la fréquence de résonance d'un système à boîtier acoustique fermé (boîtier hermétique).  
**Q :** A l'origine, Q était l'abréviation de "facteur de qualité". Généralement, Q indique comment le mouvement du cône du haut-parleur bien contrôlé approche la résonance. **Q<sub>t</sub>** est Q, total, du haut-parleur en soi. Quand le haut-parleur est placé dans un boîtier hermétique, la rigidité de l'air enfermé augmente le Q total. **Q<sub>c</sub>** signifie Q, total, du système à boîtier acoustique fermé.

**CHARGE NOMINALE :**  
Il y a vraiment deux types complètement différents de charge nominale. **Charge de puissance calorifique** évalue combien de puissance peut recevoir le haut-parleur sans faire fondre la bobine mobile. Ceci est surtout déterminé par la dimension de la bobine mobile ; le SWR-304D/SWR-304E, SWR-254D/SWR-254E utilise une bobine de 3", laquelle fournit une charge nominale haute, avec une plaque avant extra-solide pour une marge spéciale. **La charge de puissance mécanique** évalue combien de puissance peut recevoir le haut-parleur sans rupture ; cela dépend fortement de la fréquence et de l'encadrement. La charge nominale mécanique est très difficile d'évaluer sans un essai réel. Alpine établit des tests de puissance de 96 heures pour confirmer la résistance mécanique à long terme de chaque woofer.

**SORTIE DE HAUT-PARLEUR :**  
Le niveau de pression acoustique (SPL) est déterminé par la quantité d'air déplacée par le woofer. Celle-ci est ajustée par l'air de surface **S<sub>d</sub>** du woofer et par son **excursion** (mouvement oscillant (de va-et-vient)). **La sortie maximale à basses fréquences est stabilisée seulement par la capacité d'excursion (mouvement) du woofer**, étant donné que la plupart des amplificateurs sont dotés de puissance pour commander le plus grand nombre de woofers à une déviation extrême à basses fréquences. L'égalisation peut changer la balance acoustique, mais celle-ci n'affectera pas la sortie maximale. La lecture de plus de 3 dB signifie 1,4 fois autant d'excursion.

**F<sub>s</sub>** denotes the resonance Frequency of the speaker; **F<sub>c</sub>** denotes the resonance Frequency of a closed box system (sealed box). **Q**: Q originally was an abbreviation of "Quality factor". Generally, Q denotes how well controlled the movement of the speaker cone is near resonance.

**Q<sub>t</sub>** is the **Q**, total, of the speaker by itself. When the speaker is placed in a sealed box, the stiffness of the trapped air raises total Q. **Q<sub>c</sub>** stands for **Q**, total, of the closed box system.

**POWER HANDLING:**  
There are really two completely different types of power handling.

**Thermal power handling** rates how much power the speaker can take without the voice coil melting. This is determined by voice coil size; the SWR-304D/SWR-304E, SWR-254D/SWR-254E uses a 3" coil for high power handling.

**Mechanical power handling** rates how much power the speaker can take without breaking or tearing; this depends on strongly on frequency and on the enclosure. Mechanical power handling is very difficult to evaluate without actual testing. Alpine tests speakers at full power for 96 hours to confirm the mechanical toughness of each woofer.

**SPEAKER OUTPUT:**  
Sound pressure level (SPL) is determined by how much air the woofer moves. This is set by the woofer's surface area **S<sub>d</sub>** and by its **excursion** (motion back and forth).

**Maximum output at low frequencies is set only by the woofer's excursion (movement) capacity**, since most amplifiers have enough power to drive most woofers to full excursion at low frequencies. Equalization can change the sound balance, but will not affect maximum output. Playing 3 dB louder means 1.4 times as much excursion.

**ENCLOSURES (BOXES) :**  
Designing and building the best speaker enclosures takes time, tools, and know-how. If you don't have a lot of experience, consult a professional who has designed and built successful enclosures.

**FREE AIR :**  
Free air mounting uses the trunk as a "box." Please note that rear hatch covers do not isolate very well and are not usually strong enough to support the weight of a subwoofer.

**Advantages :** Free air is easier, quicker, and cheaper. It can also fill up less trunk space.

**Disadvantages :** In most cars, the trunk leaks to the passenger compartment. Therefore, free air mounting will lose bass output compared to a boxed woofer. Since the woofer is not loaded by box air pressure, it handles less power.

**Tips :** For best results, try to make the box rectangular instead of square, and mount the driver(s) off-center. Port ends should be spaced at least one diameter from any obstructions to breathe properly.

**Wiring :** Wiring speakers in series is not recommended. If possible, mount speakers in a common cavity, wired in parallel to the same amplifier channel. If the speakers are not connected to the same amplifier channel, they should be in separate cavities.

**SEALED BOXES :**  
A sealed enclosure is just what it sounds like : a closed box around the woofer to isolate the front and rear sound waves from each other. It rolls off 2nd order (12 dB per octave) at low frequencies.

**How they work :** The trapped air in the box adds stiffness to the speakers' own stiffness. This raises the resonance frequency and Q from free air values. The smaller the box, the stiffer the trapped air acts, and the more Q<sub>c</sub> and F<sub>c</sub> increase. Cone motion tends to "ring" (keep moving after the amplifier signal stops) more because the box is "springier." As you can see from the graph and table on page five, low frequency output decreases, because the amplifier has to push the speaker against a stiffer air spring.

**Disadvantages :** Reinforce the factory rear deck and seat back, and caulk any remaining openings to the passenger compartment. Of course, this can be more work than making a proper enclosure!

**Tips :** Reinforce the factory rear deck and seat back, and caulk any remaining openings to the passenger compartment. Of course, this can be more work than making a proper enclosure!

**Advantages :** Closed box designs are easiest to get good results with. Simply decide whether you want a tight sound (low Q) or a boomy sound (high Q), then size the box accordingly (see table). Sealed boxes control cone motion the best.

**Disadvantages :** Compared to free air, a sealed box takes up more room in the trunk. Around 20 to 80 hertz, a ported box can have a higher maximum output.

**Tips :** To make the box act about 20% bigger than it is, use filling (stuffing). Stuff the box with one pound of polyester per cubic foot, or fill the box with fiberglass mats (loose fiberglass can get into the voice coil). Box volumes between those listed yield results in between what the graph and table show.

**VENTED (PORTED) BOXES :**  
Adding a port to the box increases system complexity to 4th order (24dB per octave low and rolloff).

**How it works :** The port acts a bit like an organ pipe. At the tuning frequency **F<sub>b</sub>** (Frequency of the box), the port damps the woofer so it moves very little. Almost all the output at F<sub>b</sub> comes from the port resonating. Above F<sub>b</sub>, the port has little effect.

**Advantages :** Near F<sub>b</sub>, ports allow more output with less cone motion than a sealed box. Distortion can be lower overall.

**Disadvantages :** Below F<sub>b</sub>, the port acts like a big leak. The enclosure cannot provide stiffness to the woofer, so the unloaded woofer moves a lot, like it was mounted free air. Output below F<sub>b</sub> is less than free air or a sealed box. Also, ported systems are much easier to get bad results from than a sealed box.

**Tips :** For F<sub>b</sub> = 0.577 (the **Bessel** alignment), cone control is even better. Bass has a very tight, controlled sound, but some people may think it sounds "thin." The larger box gives more low bass output per watt.

**Advantages :** For Q<sub>c</sub> < 0.577, the sound will be very damped and controlled. Some people may think it sounds "thin".

**Tips :** To make the box act about 20% bigger than it is, use filling (stuffing). Stuff the box with one pound of polyester per cubic foot, or fill the box with fiberglass mats (loose fiberglass can get into the voice coil). Box volumes between those listed yield results in between what the graph and table show.

**Alignments :** Ported boxes also have alignments, many more than the scope of this Guide. Very motivated individuals should look at the References for more information.


**Tips :** F<sub>b</sub> should be kept below the lowest bass note you want to reproduce. Practically, this means tuning F<sub>b</sub> between 20 to 35 Hz. The graph above shows some ported designs, as a starting point to experiment from if you wish.

## FREQUENCY RESPONSE CURVE in SEALED ENCLOSURE/ Caractéristique de fréquences dans un boîtier hermétique

### SWR-304D/SWR-304E

SEALED BOX/BOITE HERMETIQUE


24 /(0.85 ft<sup>3</sup>)\*

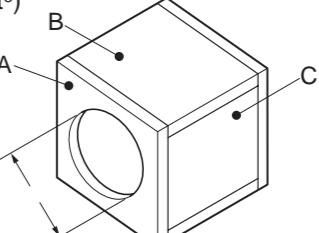

A : 330X330mm (13"X13")  
B : 330X280mm (13"X11")  
C : 292X280mm (11-1/2"X11")  
: 274mm (10-3/4")

PORTED BOX/BOITE A ORIFICES

32 /(1.13 ft<sup>3</sup>)\*

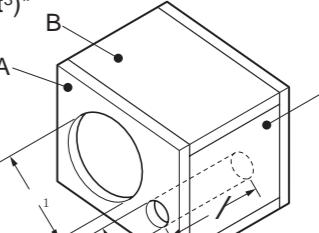


A : 330X430mm (13"X16-7/8")  
B : 280X430mm (11"X16-7/8")  
C : 292X280mm (11-1/2"X11")  
: 274mm (10-3/4")  
: 70mm (2-3/4")  
: 253mm (10")

\* Above dimensions stand for internal dimensions and do not include thickness of the board and sound absorption material.  
\* Les dimensions ci-dessus représentent les dimensions intérieures. L'épaisseur de la plaque et le matériel d'absorption du son ne sont pas inclus.

● For the panels used/Pour les panneaux utilisés

Panels should be 19mm (3/4") MDF/Les panneaux doivent avoir 19mm (3/4") MDF.

FREQUENCY RESPONSE CURVE/ Caractéristique de fréquence à pression sonore de sortie

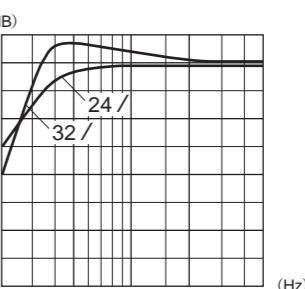

24 /(0.85 ft<sup>3</sup>) : SEALED BOX/BOITE HERMETIQUE


32 /(1.13 ft<sup>3</sup>) : PORTED BOX/BOITE A ORIFICES

● Volumes of the board thickness and sound absorption material are not included in the above volume.  
● Les volumes de l'épaisseur de la plaque et du matériel d'absorption du son ne sont pas inclus dans le volume en haut.

### SWR-254D/SWR-254E

SEALED BOX/BOITE HERMETIQUE


13 /(0.46 ft<sup>3</sup>)\*

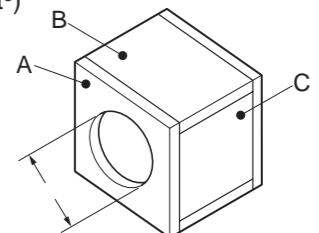

A : 305X305mm (12"X12")  
B : 305X182mm (12"X7-3/16")  
C : 267X182mm (10-1/2"X7-3/16")  
: 230mm (9-1/16")

PORTED BOX/BOITE A ORIFICES

18 /(0.64 ft<sup>3</sup>)\*

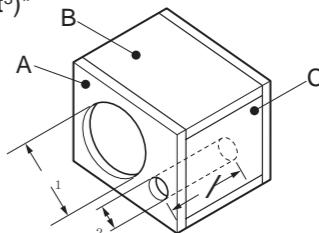


A : 270X360mm (10-5/8"X14-1/4")  
B : 241X360mm (9-1/2"X14-1/4")  
C : 241X232mm (9-1/2"X9-1/8")  
: 230mm (9-1/16")  
: 65mm (2-1/2")  
: 230mm (9-1/16")

\* Above dimensions stand for internal dimensions and do not include thickness of the board and sound absorption material.  
\* Les dimensions ci-dessus représentent les dimensions intérieures. L'épaisseur de la plaque et le matériel d'absorption du son ne sont pas inclus.

● For the panels used/Pour les panneaux utilisés

Panels should be 19mm (3/4") MDF/Les panneaux doivent avoir 19mm (3/4") MDF.

FREQUENCY RESPONSE CURVE/ Caractéristique de fréquence à pression sonore de sortie

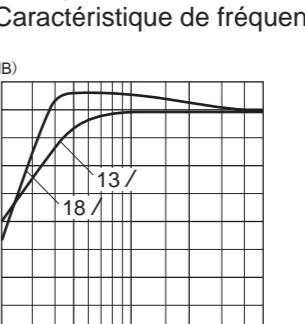

13 /(0.46 ft<sup>3</sup>) : SEALED BOX/BOITE HERMETIQUE

18 /(0.64 ft<sup>3</sup>) : PORTED BOX/BOITE A ORIFICES

● Volumes of the board thickness and sound absorption material are not included in the above volume.  
● Les volumes de l'épaisseur de la plaque et du matériel d'absorption du son ne sont pas inclus dans le volume en haut.